

Courtyard  
Collection™

# Adding Stability to Posts

Techniques for building taller posts or building in poor soil.




## BUILDING TALLER POSTS

For projects where a taller post is desired or needed, it may be necessary to provide additional stability under the post. Foundation widths and depths will vary from project to project. The 4 options below show how this can be achieved.

### Adding Strength with a Concrete Pile and Sonotube Option 1:

#### You will need:

- 8 in. sonotube (200 mm), cut to desired length
- Posthole digger
- Ready mix concrete
- Rebar (as required based on application)

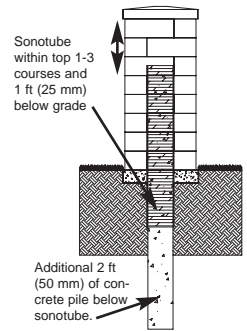

#### NOTE FOR ALL POST CONSTRUCTION:

*The soil beneath the foundation pad must be a good quality compactable material. If soft soils are encountered, you will need to remove and replace them with additional crushed rock. A good foundation will ensure a stable post for years to come.*

#### Step 1: Layout

Determine the location of the post and lay the first course of block to establish where to dig the foundation pad.

#### Step 2: Foundation


Mark the location of the post with a shovel, remove the blocks and dig a 24 in. (600 mm) square, 4 in. (100 mm) deep hole. Using a post hole digger, dig a hole for the sonotube approximately 3 ft (1.0 m) deep with a 8 in. (200 mm) diameter to accommodate for a 8 in. (200 mm) sonotube in the center of the foundation pad.

#### Step 3: Sonotube

Mark and horizontally cut the sonotube so that the tube will extend up within the **top** 3 courses of the post. Install bracing (if necessary) on the sonotube 12 in. (300 mm) from the bottom. Next place the sonotube in the post hole and install vertical bracing to hold the sonotube in a level upright position.

#### Step 4: Concrete Pile

Pour the concrete mixture into the top of the sonotube until both the sonotube and the posthole are filled. Make sure the sonotube is level and plumb. (Rebar can be added while concrete is wet, as required based on application). Allow concrete to set a minimum of 4 hours before proceeding. Once the concrete is set, remove the vertical and horizontal bracing on the sonotube.

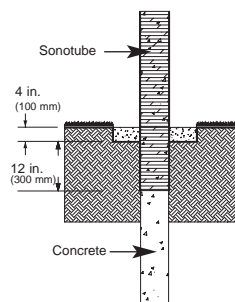

Corner  
Block



Post  
Cap




allanblock.com

# Adding Stability to Posts

Techniques when building taller posts or building in poor soil.

## Step 5: Foundation

Fill around the sonotube with 4 in. (100 mm) of crushed rock to build the post foundation. Use a hand tamper to compact. Level foundation pad from front to back and side to side, making adjustments where needed. A level foundation pad will ensure a level and plumb post.

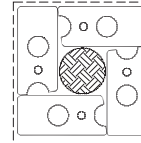


## Step 6: Base Course

Install the first course with 4 Corner Blocks with the long sides facing out. Square up the blocks, tamp into place and level.

### Corner Block

Short side

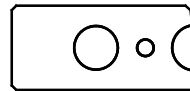


Long side



## Step 7: Continue Building

Continue stacking courses, alternating between the patterns to offset the seams from the course below until the desired height is achieved. **Do not stack the blocks up in stacked bond (seams should not create a straight line the full height of the post).**

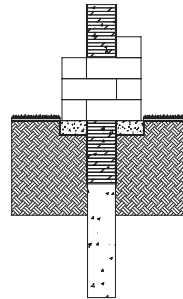

## Step 8: Finish


Finish the post with two Post Caps. Secure the Wall Caps in place with a bead of masonry adhesive along the outside edge of the top course of Corner Blocks and then set the Post Caps in place. (adhesive optional).




## BUILDING POSTS IN SOFT SOILS OR ADDING ADDITIONAL STABILITY

Use one of these three additional options when building in soft soil conditions. If building with posts and panels, interlock the panels into the posts for additional stability. See How-to sheet #230.


### Increase Base Depth and Width Option 2:

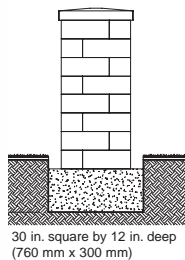

### Install Concrete Pile with Bell Option 3:

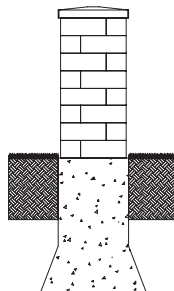

### Install Concrete Footing Below Post Option 4:

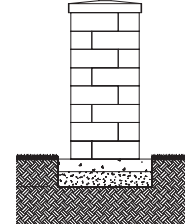

## ADDING STABILITY



Secure the blocks together with masonry adhesive to add strength to the post



allanblock.com

For a complete library of Courtyard Collection How-to sheets visit [allanblock.com](http://allanblock.com)